



# Prodigi software

powered by Humañware

**User guide**

Prodigi Windows 1.1

Rev. 000

## TABLE OF CONTENTS

---

1. Introduction .....	6
2. Package Options .....	6
What's in the Box?.....	6
Option 1: Prodigy Low Vision Software for Windows .....	6
Option 2: Prodigy Low Vision Software for Windows: Starter Kit .....	7
Option 3: Prodigy Low Vision Software for Windows: Complete Kit.....	7
Option 4: Prodigy Low Vision Software for Windows: All-in-One PC.....	7
2.1 Initializing your tablet or All-in-One PC .....	8
3. Software Install .....	8
3.1 Quickstart Guide .....	9
4. Software Updates.....	9
4.1 UPDATING PRODIGI .....	10
5. Connecting and Using the HoverCam SOLO 8+ Camera .....	10
5.1 Connecting to the Tablet.....	10
5.2 General Operation.....	11
6. Using Prodigy Windows Software.....	11
6.1 Default Interface: The Prodigy Carousel .....	12
7. Getting Started .....	13
Orientation to the UI: The Applications Carousel.....	13
8. Settings Application .....	14
8.1 Settings Menus.....	14
8.2 User Interface.....	15
Interface.....	15
System Language.....	15
Uninstalling a Voice .....	16
Colors .....	16
Locator Color.....	16
Screen Brightness.....	17
Button Banner.....	17
8.3 Audio .....	17
Speech .....	17

Speech Rate .....	18
Sounds .....	18
8.4 System .....	18
Wi-Fi Setup .....	18
Bluetooth Setup .....	19
Accessibility Setup .....	19
Automatic Software Updates .....	20
Manual Software Updates .....	21
Send Crash Logs .....	21
Restore to default settings .....	21
8.5 Account .....	22
8.6 About .....	23
8.7 Exit to Windows .....	23
9. Magnifier Application .....	24
9.1 Magnifier / Distance toggle .....	25
9.2 Magnifier Settings .....	26
Camera .....	26
Brightness .....	26
Contrast .....	26
Contrast Color .....	27
Capture Mode .....	27
Autofocus .....	28
Speech .....	28
OCR (toggle) .....	29
Choose OCR Language .....	29
9.3 Capturing Images and Text .....	29
9.4 Zooming In and Out .....	31
9.5 Saving an Image or Document .....	32
10. Files Application .....	33
10.1 Viewing Documents and Images .....	35

Contrast .....	35
Contrast Color .....	36
Brightness .....	36
Voice .....	36
Speech .....	36
Reading Mode.....	37
Preferred Zoom.....	37
Rotation.....	37
10.2 Action Menu (for Folders).....	40
Move .....	40
Delete.....	40
Rename .....	40
Create Folder.....	41
Delete Folder Content.....	41
10.3 Action menu (for documents and images) .....	41
Move .....	41
Delete.....	41
Rename .....	41
Export.....	42
Import .....	42
Properties.....	42
11. Distance application.....	43
11.1 Distance Settings .....	44
Camera .....	44
Contrast .....	44
Contrast Color .....	45
Brightness .....	45
Autofocus (toggle).....	45
11.2 Capturing Images .....	46

11.3 Saving an Image or Document.....	46
11.4 Zooming In and Out .....	47
12. Help Application.....	48
13. Gesture Guide .....	49
Pinch and zoom gesture.....	49
Tap gesture (for accessing applications, selecting preferences, etc.).....	49
Double tap gesture (header bar, etc.) .....	50
Long press gesture.....	50
Toggle from Live to Multi-Capture Mode .....	50
14. Keyboard Shortcuts .....	51
15. Glossary .....	51
16. Troubleshooting.....	52
17. Prodigy System Recommendations.....	53
18. Appendix 1.....	54
18.1 Basic Prodigy Windows Bluetooth Keyboard Commands.....	54
18.2 General keyboard shortcuts.....	56
19. Appendix 2.....	57
Connecting the Kodak Wi-Fi Distance Camera to Prodigy Software .....	57
20. Technical Specifications .....	58
Prodigi Low Vision Software for Windows.....	58
Prodigi Low Vision Software: Starter Kit.....	59
Prodigi Low Vision Software: Complete Kit.....	59
Prodigi Low Vision Software: All-in-One Kit.....	60
21. Software Maintenance Agreement and Warranties .....	60
21.1 Software Maintenance Agreement .....	60
21.2 Warranties.....	61

# 1. INTRODUCTION

---

Thank you for purchasing Prodigy Windows software.

The software package is a personal vision assistant system from HumanWare, the global leader in assistive technologies for people with low vision. The intuitive and intelligent user interface offers users unparalleled flexibility and can be controlled via a standard mouse, keyboard, or devices with touch-control screens.

The adaptable system aims to maintain and restore independence for people living with vision loss. Prodigy Windows is a complete magnification system that allows you to magnify and read documents and capture images.

We recommend reading this user guide's operating and safety instructions *before* using Prodigy Windows software. If you have any questions, please contact HumanWare Customer Service (contact information appears at the end of this user guide). To obtain the most recent version, please visit the Support page at <https://www.humanware.com/prodigisoftwaresupport>.

Note: Some features described in this user guide may not be available in your language.

# 2. PACKAGE OPTIONS

---

## WHAT'S IN THE BOX?

### Option 1: Prodigy Low Vision Software for Windows

You can access a powerful suite of low-vision tools on your Windows-based device. The base software package provides essential features to improve digital content accessibility. Enjoy magnification, text-to-speech, and more, enhancing your reading and daily tasks. The software-only solution empowers users to use their own computing device and camera, offering a cost-effective option for users with existing hardware.

- Prodigy for Windows software delivered via email and download

#### Option 2: Prodigy Low Vision Software for Windows: Starter Kit

The software-plus-camera solution provides a comprehensive solution for users who own a computer but lack a suitable document camera. Prodigy software combined with a SOLO 8Plus document camera for a simplified low-vision solution enables enhanced magnification, OCR, and TTS functionalities, empowering users to engage with printed materials effortlessly.

- Prodigy for Windows software delivered via email and download
- HoverCam SOLO 8+ document camera
- Microsoft Adaptive Kit
- Quick Start Guide
- Carry bag

#### Option 3: Prodigy Low Vision Software for Windows: Complete Kit

This is a fully expanded version of the Starter Kit for users seeking convenience and performance. It includes a Microsoft Surface tablet, HoverCam SOLO 8+ camera, and accessories. With this kit, you can enjoy unparalleled magnification, OCR, and TTS capabilities, all in one convenient package.

- Microsoft Surface tablet
- HoverCam SOLO 8+ document camera
- 6-in-2 Microsoft Surface Docking Station
- Bluetooth keyboard
- Bluetooth mouse
- Microsoft Adaptive Kit
- Quick Start Guide
- Carry bag

#### Option 4: Prodigy Low Vision Software for Windows: All-in-One PC

This turnkey solution boasts the same productivity as a desktop solution. It includes a 24" PC monitor for enlarged viewing, integrated webcam, SOLO 8+ camera, wired keyboard, and mouse, and Microsoft Adaptive Kit.

- 24" AOC All-in-One PC
- HoverCam SOLO 8+ document camera
- USB keyboard and mouse
- Microsoft Adaptive Kit
- Quick Start Guide

## 2.1 INITIALIZING YOUR MICROSOFT SURFACE TABLET OR ALL-IN-ONE PC

If you have purchased Option 3 (Complete Kit) or Option 4 (All-in-One PC), you will need to initialize your Microsoft Surface table just like any new Windows-based device. Then, you will need to install and activate your Prodigy software. Visit the [Prodigi Software support page](#) to access support videos of the Microsoft Surface tablet initialization process.

Note: Microsoft Surface Tablet or All-in-One PC initialization can take from 30 minutes to two hours depending up on Internet connection and Windows updates that need to be installed.

## 3. SOFTWARE INSTALL

---

Note: for package options 3 and 4, the user must set up their Microsoft Surface Tablet using Microsoft's wizard - then install and activate Prodigy for Windows. The Prodigy for Windows software install process is like installing any other software on your computing device. You must download the software and use your credentials (username/password) to activate it. You will be sent an email from HumanWare or your Prodigy License Administrator containing links to create your credentials and download the Prodigy software.

### Download and installation instructions:

1. Download the software
  - Click on the link below to begin downloading the Prodigy software. <https://humanware.s3.us-east-2.amazonaws.com/prodigi/windows/1.0/Prodigi.appxbundle>
2. Run the installer
  - Once the download is complete, locate the file in your Downloads folder or your specified location.
  - Double-click the installer file to run it.
3. Follow the installation prompts and activate your software



- Follow the on-screen instructions to install the software on your device.
  - Accept the End User License Agreement (EULA) to install.
  - Enter your software using your Prodigy credentials (username and password).
  - Choose your voice(s) for installation. You can choose up to four.
  - Select your audio preference for Prodigy.
4. Complete the installation
    - Once the installation is complete, you will see a confirmation message.
    - Click 'Finish' to exit the installer.
  5. Start using your software
    - Open Prodigy for Windows from your desktop or the Start menu.



- In the [Magnifier application](#), identify the camera you wish to use.
- In the [Distance application](#), identify the camera you wish to use.

We encourage users to customize [Settings](#) to their specific needs.

### 3.1 QUICKSTART GUIDE

For users who are in a hurry to start magnifying, please refer to our Quick Start Guide on the [Prodigy Support page](#).

## 4. SOFTWARE UPDATES

---

Prodigy software's over-the-air update capability ensures that users with low vision receive continuous improvements, enhance performance, and introduce new features. This provides a seamless experience, keeping the software at the forefront of accessibility and catering to users' specific needs. It eliminates the inconvenience of manual updates and guarantees ongoing support for an optimal low-vision experience.

## 4.1 UPDATING PRODIGI

When Prodigy Windows is started, an **Available Updates** window will pop up if an update is available.

1. Click **Update Now** (progress bars for each application will briefly appear).

The **application will now restart** message will appear.

Your **Software is up to date** message will appear.

2. Click **OK**.

Two other options will appear on screen: **Details** (reveals version numbers of each application) and **Remind me later** (a reminder will be issued each time you launch Prodigy Windows).

Alternatively, you can manually check and run updates: Launch Prodigy and go to **Settings > System > Software Update**; run the update to complete the installation.

## 5. CONNECTING AND USING THE HOVERCAM SOLO 8+ CAMERA

---

Prodigy Windows software has been optimized for the HoverCam SOLO 8+ camera but can be used with almost any USB-connected document camera (note that other document cameras may not be fully supported).

### 5.1 CONNECTING TO THE MICROSOFT SURFACE TABLET

The HoverCam SOLO 8+ comes with a USB 3.0 cable. Connect it to the HoverCam and connect the opposite end of the cable with a standard USB connection to your tablet (an adapter may be required). If you require help connecting your HoverCam visit the [Solo 8 Plus page](#). You will note that HoverCam has 5 tactile buttons located at the camera base (auto-focus, auto-focus lock, increase magnification, decrease magnification, and rotate image). The functionality of these buttons has been recreated and appears throughout Prodigy for Windows.

## 5.2 GENERAL OPERATION

The arm of the camera and camera head can be adjusted up/down to increase or decrease the field of view. The camera head can also be rotated if necessary.

The camera also has a gearwheel located in the camera head. Grip the gearwheel by its sides, using your thumb and index fingers, to select the A3 or A4 format for viewing and capturing images. **We recommend the A3 setting for the best user experience.**

Go to the Magnifier application and select a camera:

**Magnifier > Camera > HoverCam Solo 8+**

You can select any USB or integrated camera on your device or a connected camera for the Magnifier or Distance applications.

See [Appendix 2](#) for instructions on using Wi-Fi cameras.


Users can assign different cameras for different purposes (for example, document magnification or distance viewing).

## 6. USING PRODIGI WINDOWS SOFTWARE

---

Prodigi Windows software allows users with PCs or touch-enabled tablets to navigate and use their devices via keyboard, mouse, or touchscreen.

## 6.1 DEFAULT INTERFACE: THE PRODIGI CAROUSEL

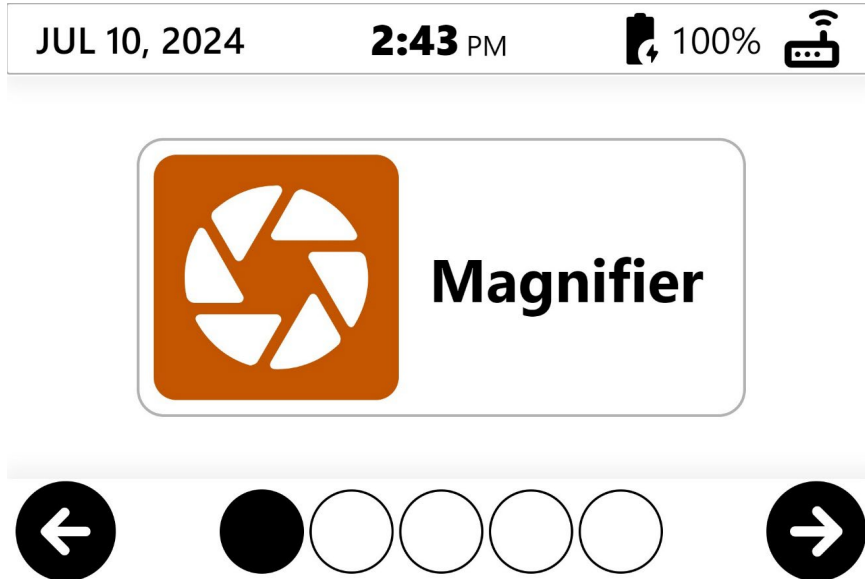

The header bar displays important system information when you are in the software's Carousel interface.

Starting from the top left side of the screen, the Header bar provides the following system information:

- Date (month/day/year)
- Time (hours: minutes)
- Battery level in percentage
- Wi-Fi status

By default, the Application Carousel features one large rectangle positioned in the center of the screen displaying the application. There are five applications in total. Note that the default interface can be customized to display one or several applications. Refer to [Settings](#).

- The left and right arrows appear at their respective bottom corners of the screen. They allow the user to cycle through the applications.
- The five circles at the base of the page each correspond with one of the applications and can be clicked for quick access to their respective applications.

Note that the Header bar disappears when you enter any application.

## 7. GETTING STARTED

---

### ORIENTATION TO THE UI: THE APPLICATIONS CAROUSEL

Prodigy Windows applications are accessed via the Applications Carousel, click any of the applications to access them.

- **Magnifier** (camera shutter icon): The Magnifier application allows users to magnify or manipulate documents and objects. They can also be captured and saved for future viewing.
- **Distance** (mountain icon): The Distance application provides flexibility for users by allowing them to see things further away from them using different cameras, such as a rear-facing PC camera or a portable camera.
- **Files** (file folder icon): Prodigy Windows allows you to store captured documents and images in the Files application, where you can access them at any time.
- **Settings** (gear icon): Settings allow users to select and modify user interface features such as audio and system parameters. The Settings application also provides important system information and allows users to exit the standard Windows environment.
- **Help** (question mark icon): The Help application allows you to easily access Prodigy documentation and videos, provide direct feedback to HumanWare, and make contact for support.

## 8.SETTINGS APPLICATION

---



These are global, system-wide settings that apply throughout the Prodigy Windows environment and allow you to adjust the system according to your needs and preferences. These settings allow you to define a variety of functions, including how many applications appear in the Application Carousel, activating/deactivating tablet sounds and vibrations, selecting speech rates, and so forth.

Note: Each application also has its own individual (application-specific) settings. These are discussed in more detail under each application section below.

### 8.1 SETTINGS MENUS

Six menus are available in Settings:

1. User Interface
2. Audio
3. System
4. Account
5. About
6. Exit to Windows

Submenus are indicated by arrows at the right edge of the screen. Tap or click the arrow to access that option in the submenu. For example:

**Settings > User Interface > Button Banner > Auto✓/Hide/Always**

Current settings selections are indicated with a checkmark to the right of the item.

Some menu items require the User to make manual settings adjustments, for example:

**Settings > User Interface > Screen Brightness > Click the Plus or Minus symbols** that appear at the base of the screen to increase or decrease screen brightness.

Note that you can always click the **Back arrow** (located at the top, left of the screen) to access the previous screen.



## 8.2 USER INTERFACE

The Settings application allows users to select, customize, and enable or disable user interface features. This customization allows users to create a comfortable working environment that best suits their needs.

### Interface

Users have a wide range of visual capacities, and some may be able to work with several application icons on the screen. This feature allows you to select how many application icons appear in the Carousel. These icons can be clicked for quick access to their respective applications.

**Settings > User Interface > Interface: Carousel > select 1, 2 or 4 application icons**

### System Language

Displays the current Prodigy system language and voice ✓ and all others currently installed (up to four at any time). The selected language will be reflected throughout the Prodigy interface, and its associated voice will be used for text-to-speech based on selected audio settings.

To install a new language (and voice), follow these steps:

**Settings > User Interface > System Language > Configuration > Select a voice from the alphabetical list of available system languages**

Prodigy has 53 text-to-speech voices, available in 18 languages. You may want multiple voices (one for pleasure, one for academic/professional), or one for native language and one for language learning (bilingual) – note that the maximum number of voices is four. The

language selected here will apply to the interface, therefore, if you select German, the interface will be in German.

The languages available are English, Catalan, Czech, Danish, Dutch, Faroese, Finnish, French, German, Greek, Italian, Norwegian, Polish, Portuguese, Spanish, Swedish, Turkish.

#### Uninstalling a Voice

Note that you must first select a replacement voice before uninstalling a voice.

**Settings > User Interface > System Language > Configuration > deselect the voice that you wish to uninstall > select a new voice to install > click the Back arrow (top, left) > click submit (paper airplane symbol at the top, right) > Apply changes will pop up > click Yes**

**Voice update completed** message will appear. Click **OK**.

#### Colors

Prodigy Windows allows you to select from 24 different color combinations and contrasts to suit your visual needs and preferences.

**IMPORTANT:** This is the color contrast for the user interface and its elements like menus, buttons, etc. It does not apply to captured documents or images.

For example, if your combination is Black on White, negative contrast will show text and images in White on Black. This is useful if you wish to reverse the contrast of text that contains a variety of contrasts or highlights.

Options include:

- Black on white (default), White on black, Black on gray, Gray on black, Black on yellow, Yellow on black, Black on orange, Orange on black, Black on cyan, Cyan on black, Black on purple, Purple on black, Black on green, Green on black, Blue on yellow, Yellow on blue, White on blue, Blue on white, Beige on black, Black on beige, Black on Red, Red on Black, White on Red and Red on White

**Settings > User Interface > Colors > select Color**

#### Locator Color

The Locator Colors tell users exactly where they are in the user interface or a sub-menu. They can be selected to suit individual needs and preferences. Options are:



- Blue, Cyan, Green, Orange, Purple, Red (default), Yellow

**Settings > User Interface > Colors > select Locator Color**

#### Screen Brightness

Lighting conditions can vary depending on time of day or other factors such as where your tablet is located in a room. Screen brightness level can be adjusted as desired by clicking the Plus or Minus symbols from 5 (low brightness) to 100 (full brightness).

**Settings > User Interface > Screen Brightness > click the Plus or Minus symbols**

#### Button Banner

Depending on your preferences, the Button Banner can be configured to display or hide when TTS is activated.

- When it is set to **Always**, you will never see the up-arrow because the Button Banner is always present
- When set to **Auto** and the Button Banner automatically disappears during a reading activity
- When set to **Hide**, the Button Banner is always suppressed from the user's view until they click the up arrow

**Settings > User Interface > Button Banner > Auto/Hide/Always**

## 8.3 AUDIO

You can opt to listen to captured documents via [OCR](#), simply access Audio settings to select/de-select TTS functionality, sounds and to determine speech rates.

#### Speech

Use this setting to select if you want to listen to a TTS (text-to-speech) voice. Options are:

- **On** provides audio support (TTS) for everything in the Prodigy interface
- **Documents only** provides audio support (TTS) only for OCR-applied documents
- **Off** (default) no audio (TTS) support at all

**Settings > Audio > Speech > On/Documents Only/Off**

### Speech Rate

Use this setting when to select a speech rate when you are listening to a TTS (text-to-speech) voice. Options are:

- Very Slow
- Slow
- Normal (default)
- Fast
- Very Fast

**Settings > Audio > Speech > Speech Rate > select Speech rate**

You can cancel the image capture and OCR process by using the **Escape key** on your Microsoft Surface tablet or by clicking **Back symbol** in lower, left corner.

### Sounds

You can toggle Sounds On (default) or Off. These are the sounds that you hear when clicking or swiping certain parts of the user interface such as the Carousel, interface subcategories or the Applications icons themselves, or when clicking the Camera icon to capture an image (you will hear a camera shutter sound).

**Settings > Audio > Sounds > On/Off**

## 8.4 SYSTEM

### Wi-Fi Setup

Note: the Windows OS interface will be opened in order to configure Wi-Fi, then returns to Prodigy upon exit.

Select Wi-Fi Setup to directly access your Windows OS to in order to make adjustments to Wi-Fi settings and parameters:

- Turn Wi-Fi on or off
- Show available networks
- Display hardware properties and manage networks

**Settings > System > Wi-Fi Setup**

- **Select a Wi-Fi Network**, then select the network that you wish to connect to
- **Click Wi-Fi: On** (a keyboard will pop up)

- **Enter your password and click Connect**

#### Bluetooth Setup

Bluetooth is set up through the Windows OS interface, then returns to Prodigy upon exit.

Select Bluetooth Setup to directly access your Windows OS to to make adjustments to Bluetooth settings and parameters.

When turned On, your Microsoft Surface tablet will attempt to discover other Bluetooth devices and be discoverable by other devices.


Note: a Bluetooth keyboard and mouse are included in the Complete Kit (Option 3), so it is important that the Bluetooth option be **turned ON**.

**Settings > System > Bluetooth Setup**

#### Accessibility Setup

Prodigi Windows allows direct access to Windows accessibility settings so that you can configure font size, brightness settings, etc.

**Settings > System > Accessibility Setup**

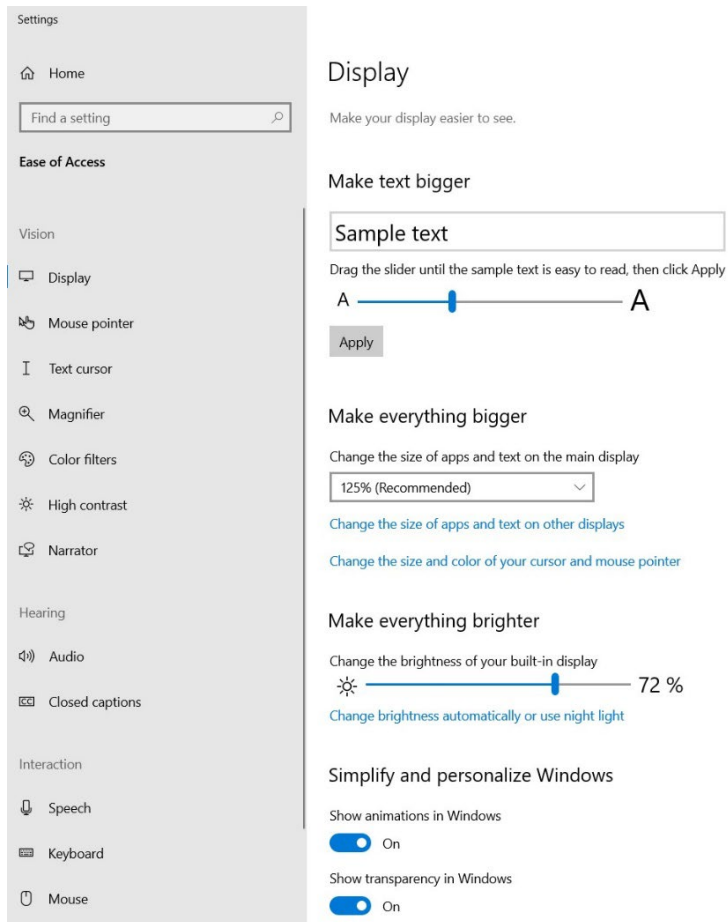

### Automatic Software Updates

When Wi-Fi is configured, Prodigy Windows software will automatically check for updates. If an update is available, you will be notified and asked if you wish to update your software. If you ignore the notifications, you can still verify if you've missed an update.

**Settings > System > Software Update**

If a software update is available, an **Available updates** screen will display **Details**, **Cancel**, **Update now** and **View release notes**.

- Click the **down arrow** at the right of the **Details** field to obtain information on the Magnifier, Distance and Files version numbers.
- Click **Cancel** if you decide to forgo the software update.
- Click **Update now** to update the software.
- Click on **View release notes** to view the version release notes.

#### Manual Software Updates

You may wish to perform a manual update for Prodigy Windows

To do so:

**Settings > System > Software Update > Update now**

Several progress bars will appear.

Message **Prodigi will now restart** will appear.

A new window will appear indicating **Your software is up to date**.

Click **OK**.

#### Send Crash Logs

This feature can be defined to send crash events automatically or when the user decides to. We highly recommend that users select the **Always** setting.

**Settings > System > Send Crash Logs > Ask Me/Always**

#### Restore to default settings

This feature restores all settings to their system defaults.

**Settings > System > Restore to system default? > Restore defaults settings > No/Yes**

Note that installed voices and saved files and images taken with Magnifier or Distance applications will not be affected. Also, sample files are re-installed.

## 8.5 ACCOUNT

Click **Account** to obtain account license information.

Users may work with a **standard** or **trial** license.

**License expiration date** is found here as well.

Your **License ID** can be conveniently copied to help in Customer Service or Technical Support situations. The License ID will help us identify the users account in our License Management System.

**Settings > Account > License ID > click the copy symbol**



When copying is successful, you will obtain the following message: “Your license ID has been copied to your clipboard.”

Clicking **Profile** opens a HumanWare license management web link with your username auto filled. Again, this is something you can share in support situations when assistance might be required. Password must be manually entered each time. Once you are logged in, you can access and modify personal information, contact information and Login name.

**Settings > Account > Profile**

A screenshot of a 'Sign in' form. The form has a title 'Sign in' at the top left. Below the title is a text input field containing the email address 'robert.morselli@humanware.com' with a right-pointing arrow. Below that is a password input field with the label 'Password' and a toggle icon (an eye) on the right. Underneath the password field is the text '! Password is required'. At the bottom left of the form is a link that says 'Forgot password?'. At the bottom right is a button labeled 'Sign in'.

The **Account** section also allows you to Logout. You will be asked **Do you really want to disconnect?** Select **Yes** or **No**.

## 8.6 ABOUT

This section displays information about the current Prodigy software and application versions, as well as the current system voice.

**IMPORTANT:** If you contact our Customer Service or Technical Support Teams, they may ask you for this information in order to provide accurate assistance.

- Prodigy Windows: version
- Magnifier: version
- Distance: version
- Files: version
- OCR: version
- Text-to-speech: version
- Voices: displays current system voice

For your convenience in a support situation, a download symbol is located at the top, right of the screen. Clicking it allows you to download a TXT file of all the system information listed above onto your desktop.



When copying is successful, you will obtain the following message: “Information exported to desktop successfully.”

## 8.7 EXIT TO WINDOWS

You can Exit Prodigy Windows in four ways:

**Settings > Exit to Windows**

or,

if using a tablet device, **Double-tap** the Carousel header bar to exit Prodigy Windows (note that some touchscreens are less sensitive than others)

or,

this action can also be accomplished by **double-clicking** the Carousel header bar using a standard mouse.

You can quickly return to Prodigy Windows by clicking the Prodigy icon (we recommend pinning the icon to your taskbar for quick access).

or,

Use Alt-Tab as another means to leave Prodigy. The benefit of this is that Prodigy continues to run in the background.

## 9. MAGNIFIER APPLICATION

---



The Magnifier application features a broad range of magnification levels (up to 28X) as well as a variety of settings and tools that transform previously inaccessible documents and images into accessible ones.

Note that the first time that you use Prodigy Windows software, you will need to select a camera that you wish to use for magnification.

**Settings > Camera > Camera: Rear** or **Camera: Front** or a **USB-connected camera** such as the HoverCam SOLO 8+ document camera.

Once the camera has been selected, the button banner will appear at the bottom of the Magnifier application screen, with the following buttons from left to right.



The base of the page features a Button Banner that includes a back arrow appears at the bottom, left:



Click it to exit the Magnifier application to return to the Applications Carousel.

## 9.1 MAGNIFIER / DISTANCE TOGGLE

The toggle symbols appear as either a Mountain icon **or** a Page icon, depending which mode you're in. The toggle symbols appear at the right of the back arrow.



Click them to move between Magnifier and Distance modes.

Note that the toggle symbol does not appear by default. **Both** the Magnifier and Distance cameras need to be set up (using two separate cameras), for the toggle symbol to appear.

If the selected camera is busy in Magnifier or Distance modes, the user is notified with a pop-up stating: **Unable to use the selected camera.**

Five additional icons appear at the right side:

- the **Settings** symbol (gear)
- the **Rotate image** symbol
- the **Image capture** symbol (camera)

- the **Plus** and **Minus magnification** symbols

## 9.2 MAGNIFIER SETTINGS



Once you are in the Magnifier application, click the **Settings** (gear) symbol that appears at the base of your screen. These settings allow you to select how images are captured (camera selection) as well as a variety of other image parameters (brightness, contrast, etc.)

### Camera

IMPORTANT: one camera must be selected.

**Magnifier > Settings > Camera >** Options include any **USB-connected camera** or **Front** or **Rear** (tablet) camera

### Brightness

Image brightness which can be incrementally adjusted from 0 to 100.

**Magnifier > Settings > Brightness >** click the **plus** or **minus** symbols to **increase** or **diminish** brightness

### Contrast

In live viewing mode, Prodigy Windows allows you to view documents and images in a contrast that best suits your needs, this is accomplished by **swiping up or down on the right side of the touchscreen**. There are 3 contrast types to choose from: color, positive or negative.

- **Color** (default) In live viewing mode, contrast is useful when viewing documents, objects, and photos in their original color.

- **Positive** contrast displays text and images in 2 colors according to the selected color combination (Black on White is the default combination).
- **Negative** contrast displays text and images in reversed contrast as compared to your selected color combination. This is useful if you wish to reverse the contrast of text that contains a variety of contrasts or highlights.

**Magnifier > Settings > Contrast > select Contrast**

Contrast Color

Prodigi Windows allows you to select from a variety of contrast color combinations for captured documents and images. They include:

- Black on white (default), White on black, Black on gray, Gray on black, Black on yellow, Yellow on black, Black on orange, Orange on black, Black on cyan, Cyan on black, Black on purple, Purple on black, Black on green, Green on black, Blue on yellow, Yellow on blue, White on blue, Blue on white, Beige on black, Black on beige, Black on Red, Red on Black, White on Red and Red on White.

**Magnifier > Settings > Contrast Color > select Contrast Color combination**

Capture Mode


Images and documents can be captured in Live mode or Multi-capture mode. You can toggle from one mode to the other in **Settings**, or you can vertically swipe the left side of the screen. To capture a multipage document, align the camera above the first page of a document and click camera or press and hold your finger down on the screen. Proceed in the same way for each page. Your multipage document will be saved in the Files application. Note: these functions are only available if the user has a touchscreen.

**Magnifier > Settings > Mode > select Multi-Capture or Live (default)**

You can also toggle from Multi-Capture to Live by vertically swiping the left side of your screen.

Commented [EB1]: Repetition

### Toggle from Live to Multi-Capture Mode (image)

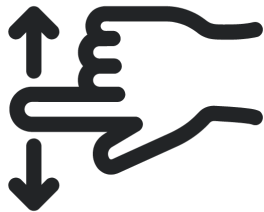

### Autofocus

When using the SOLO 8+ camera, autofocus can be toggled from Locked to Unlocked. Alternately, to lock autofocus, double tap (tap twice quickly) anywhere on the screen. The following symbol will appear on the top, right side of your screen. Prodigy Windows allows you lock or unlock (default) autofocus when in Live mode. This is useful when an object or a document is correctly focused and you need to lock its position, or when you are performing a task like writing on a piece of paper and want to prevent your camera from refocusing on your hand or pencil.



Double tap again anywhere on the screen to unlock autofocus. The Autofocus symbol will disappear.

**Magnifier > Settings > Autofocus > Locked/Unlocked** (default)

### Speech

Use this setting to select if you want to listen to a TTS (text-to-speech) voice. Options are:

- **On** - provides audio support (TTS) for everything in the Prodigy interface
- **Documents only** - provides audio support (TTS) only for OCR-applied documents
- **Off** (default) – no audio (TTS) support at all

## Settings > Audio > Speech > On/Documents Only/Off

OCR (toggle)

Prodigy Windows features [Optical Character Recognition \(OCR\)](#) for various languages while using the Magnifier or the Camera. It can be toggled to enable/disable. OCR enables reading text in column mode.

## Magnifier > Settings > OCR > Disabled/Enabled (default)

Choose OCR Language

Prodigy can perform OCR (Optical Character Recognition) in 53 languages. Additionally, the Diamond Edge feature can be applied to these languages, enhancing the visual experience at higher magnifications.

Note: While Prodigy supports OCR in 53 languages, not all of them have a corresponding text-to-speech (TTS) voice available for use after recognition.

Click Choose OCR Languages to select any of 53 available languages (default is System language), and four voices.

- **Current:** displays the system language currently used within the system
- **System language:** indicates the System Language is selected as the default OCR language
- **Other languages:** list available languages appear in alphabetical order

Magnifier > Settings > Choose OCR Language > Current: System Language (default)/Other Language.


## 9.3 CAPTURING IMAGES AND TEXT

When using the document camera, place the document directly under the document camera lens.

When using the rear-facing camera, align the Microsoft Surface tablet above the document or object that you wish to view.

When using the front-facing camera, place yourself in front of the tablet for a mirror/self-view.

Note: OCR (Optical Character Recognition) feature is automatically disabled when using the Front-facing camera.

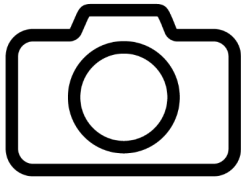

Click the **Capture symbol** to capture an image with your selected camera. You will hear a camera shutter sound, indicating that the document has been captured. Alternately, you can tap and hold your finger on the screen for 2 seconds. You will hear a camera shutter sound, indicating that the document has been captured (note that it takes a few moments to capture and process the image).

Once you've captured an image or document, three additional icons will appear at the base of your screen: a Diamond (Diamond Edge) symbol, the TTS read-aloud symbol (black, right-pointing triangle) and Save (disk) icon.



**Diamond Edge** contrast combines the best of both worlds: it displays Diamond Edge Text™ in your selected color combination and images in their original color. This allows you to magnify text to maximum levels without compromising text quality in the best color combination for your vision.

- Click Play to start reading the first visible word on the screen.
- If a word is selected, reading will start from that point.




Once you've captured a document or an image that contains text, you can click the **TTS read-aloud symbol** (black, right-pointing triangle) to have the system read the content. When clicked, the TTS read-aloud symbol will disappear and you will need to click on the up arrow at the bottom center of the screen to access the button banner, which will now display the **Pause icon** (two, vertical parallel lines).



Users can also control where reading happens on the page with a long-left mouse press or a long-press on a touch screen. This will move the focus to start reading where the user has performed the action.

## 9.4 ZOOMING IN AND OUT

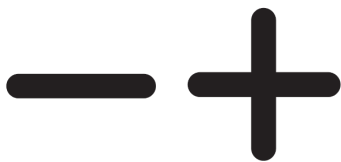


You can also increase or reduce the size of your live or captured image by clicking the **Plus or Minus symbols** at the bottom, right of the screen. (+) increases image/character size, and (-) decreases image/character size. You can also tap and hold the symbols to adjust

the zoom levels progressively and incrementally. Release once you reach the desired zoom level.

- Magnification range for a live image is from 1x to 28x.
- Magnification range for a captured image is from 1x to 80x.

In addition to the increase/decrease magnification symbols, you can employ the **pinch and zoom** gesture to increase/decrease magnification. Decrease the distance between 2 fingers to zoom out, and increase the distance to zoom in.

**Pinch and Zoom gesture** (image)

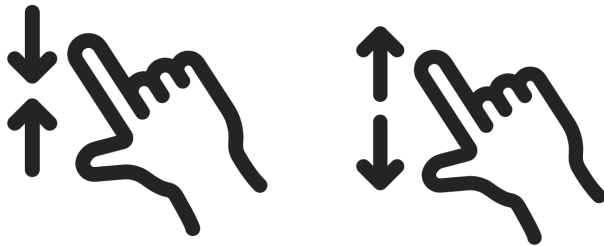

## 9.5 SAVING AN IMAGE OR DOCUMENT



Once you make a capture, the **Save symbol** will appear at the far right of the screen. Click it to save your image or document in Files for future use. Clicking Save will immediately return you to live camera mode.



## 10. FILES APPLICATION

---




The Files application is where captured images and documents are permanently stored, until you decide to delete them. Click it to access your files with saved documents and images.

Note that when Files is launched, the user is placed at the first, non-folder file.

From the Files application, you can also create folders and rename images, documents, and folders.

Note: a sample folder (labelled “Samples”) is installed with the software. You can click open the sample document to see the different settings that are available.

The bottom, center of the screen will indicate your current file number out of a total number of files and folders, for example, “1 of 12”.

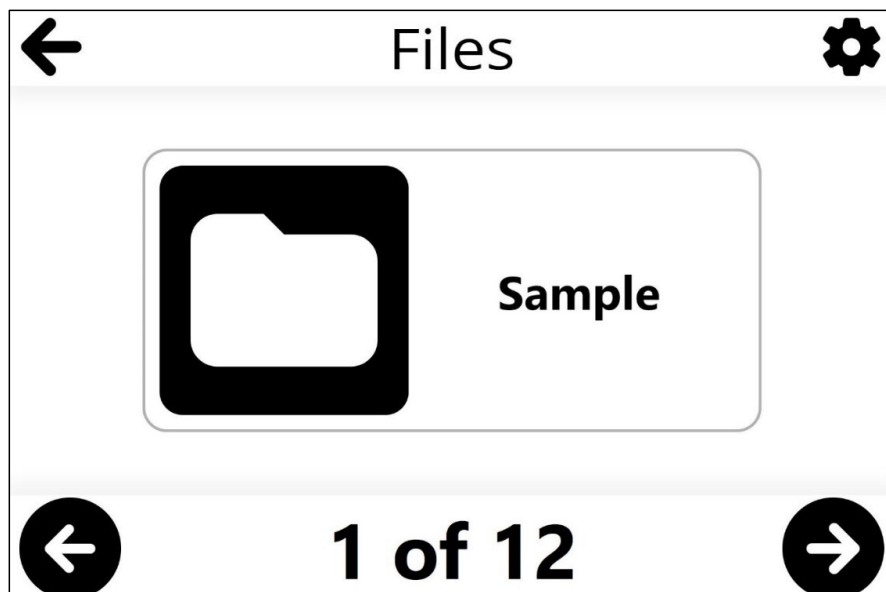

Use the left or right arrows located at the base of the screen to cycle through your files.

The top, right of the screen features a Settings symbol. Click it to access Sort, Order, Create Folder, Import and Delete All features.

- **Sort:** files can be sorted in three ways: Alphabetically, by Creation Date or by Modification Date (default).

**Files > Settings > Sort > Alphabetical/Creation Date/Modification Date**

- **Order:** files order can be toggled between Ascending (default) or Descending

**Files > Settings > Order > Ascending/Descending**

- **Create Folder:** new folders can be created by clicking Create Folder. A Create Folder field will appear, simply enter the name of the new folder and click the **Airplane icon** at the top, right of the screen to save the new folder.

**Files > Settings > Create Folder > New Folder > name new folder and click airplane icon**

- **Import:** Just as you would in any Windows environment, PDF, TXT, PNG and JPG files can be imported into your Prodigy library from elsewhere.

**Files > Settings > Import > select the location of the file outside of Prodigy to be imported > click submit (paper plane symbol at the top, right of the screen)**



- **Delete All:** permanently deletes all items in the folder. As a safety feature, you will be asked “Permanently delete all files in Files?” Click Yes or No.

**Files > Settings > Delete All > Yes/No**

## 10.1 VIEWING DOCUMENTS AND IMAGES

Click a file or a folder to open it. Once open, you will be able to cycle through your images and documents within it. Select and click a document or image to open it. The Settings symbol appears at the base of the screen and offers the following functionalities.

### Contrast

Prodigy Windows allows you to view documents, photos and objects in 3 contrast types: color, positive or negative.

- **Color** contrast is useful when viewing documents, objects and photos in their original color.
- **Positive** contrast displays text and images in 2 colors according to the selected color combination (Black on White is the default combination).
- **Negative** contrast displays text and images in reversed contrast as compared to your selected color combination. This is useful if you wish to reverse the contrast of text that contains a variety of contrasts or highlights.

**Files > click open Image or Document > Settings > Contrast > select Contrast color**

## Contrast Color

Prodigi Windows allows you to select from a variety of contrast color combinations for captured documents and images. They include:

- Black on white (default), White on black, Black on gray, Gray on black, Black on yellow, Yellow on black, Black on orange, Orange on black, Black on cyan, Cyan on black, Black on purple, Purple on black, Black on green, Green on black, Blue on yellow, Yellow on blue, White on blue, Blue on white, Beige on black, Black on beige, Black on Red, Red on Black, White on Red and Red on White.

**Files > click open Image or Document > Settings > Contrast Color > select Contrast Color combination**

## Brightness

Image brightness which can be incrementally adjusted from 0 to 100.

**Files > click open Image or Document > Settings > Brightness > click the Plus or Minus symbols** that appear at the base of the screen to increase or decrease screen brightness

## Voice

Prodigi software allows up to 4 different voices that can be used to read text documents aloud. Click to select a system voice or another installed voice.

**Files > click open Image or Document > Settings > Voice > select System voice or installed voice**

## Speech

Use this setting to select if you want to listen to a TTS (text-to-speech) voice. Options are:

- **On** - provides audio support (TTS) for everything in the Prodigi interface
- **Documents only** - provides audio support (TTS) only for OCR-applied documents
- **Off** (default) – no audio (TTS) support at all

**Settings > Audio > Speech > On/Documents Only/Off**

## Reading Mode

Readers have different preferences about how they wish text to appear on-screen while it is read, so Prodigy software allows you to select from 3 reading modes: Page, Column or Line.

**Files > click open Image or Document > Settings > Reading mode > select Page, Column or Line**

Note: you can use your mouse or touchscreen to reposition the cursor at any time during reading mode.

When reading in Column mode, end-of-paragraph markers (>>) will appear, and the reading software automatically inserts a short pause after each paragraph.

When in Page mode, a chime will sound when the reader has reached the end of the page. Pressing Play will restart the reader at the beginning of the page.

Note: DiamondEdge is the default when Page reading mode is selected.

## Preferred Zoom

Preferred zoom can be set from 2x magnification to 40x magnification (default is 4x) for all saved documents and images. Set a preferred zoom level, and your file or document will open at that default zoom level when you click to open it.

**Files > click open Image or Document > Settings > Preferred Zoom > click the Plus or Minus symbols** that appear at the base of the screen to increase or decrease Preferred Zoom level.

## Rotation



Select this feature to access the **Rotation symbol** at the bottom, right of the screen. Click the symbol to rotate an image or document clockwise, 90 degrees at a time (clicking 4 times brings a document back to its original position).

**Files > click open Image or Document > Settings > Rotation > click Rotation symbol**

#### **Diamond Edge (diamond symbol)**



For text documents, toggle the Diamond Edge to enhance the original color of a document or object to improve text/image definition. Diamond Edge contrast combines the best of both worlds: it displays Diamond Edge Text™ in your selected color combination and images in their original color. This allows you to magnify text to maximum levels without compromising text quality in the best color combination for your vision.


#### **TTS read-aloud symbol (black, right-pointing triangle)**



Once you've captured a document or an image that contains text, you can click the **TTS read-aloud symbol** and have the system read aloud content. The TTS read-aloud symbol is immediately replaced by the **Pause icon** (two, vertical parallel lines) so that you can toggle between play and pause.

Alternately, users can start reading wherever they like with a long-press (1 second) or a long mouse-click (1 second) on the word where they want the reading to begin.

### Plus and Minus symbols (+/-)

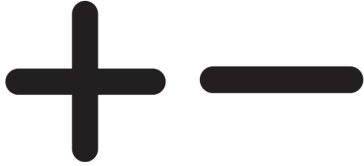


You can increase or reduce the size of captured images and documents by clicking the **Plus or Minus symbols** at the bottom, right of the screen. (+) increases image/character size, and (-) decreases image/character size.

Magnification/reduction range for a captured image or document is from 1x to 100x.

In addition to the increase/decrease magnification symbols, you can employ the **pinch and zoom** gesture to increase/decrease magnification. Decrease the distance between 2 fingers to zoom out, and increase the distance to zoom in.

### Pinch and Zoom gesture (image)

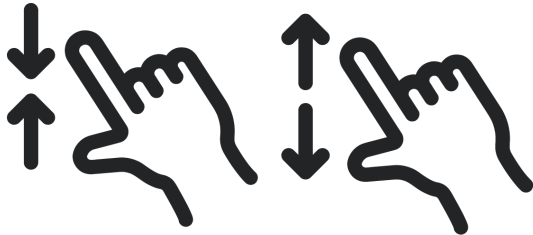

## 10.2 ACTION MENU (FOR FOLDERS)

The Files application features an **Action Menu** that includes useful functions for your saved folders.

To access the Action menu, **right-click** a Folder. You will be directed to a menu listing available actions for your selected file. This menu can also be accessed by a long, one-finger press on the file or folder.

### Move

Clicking Move leads to the **Create New Folder** option if you want to move a folder to a new folder. All other previously existing folders will appear on the list as well.

**Files > Folder > Action (right-click image or document) > Move > Create Folder > enter title of new folder > click Folder symbol located at the top, right of the screen**



### Delete

Permanently deletes all items in the folder. As a safety feature, you will be asked **Permanently delete item?**

**Files > Folder > Action (right-click image or document) > Delete > Yes/No**

### Rename

Files can be renamed by right-clicking them, then selecting **Rename** from the Action menu.

**Files > Folder > Action (right-click folder) > Rename > enter the new name** then click **submit** (paper plane symbol at the top, right of the screen) to save the revised name.





#### Create Folder

Follow this process to create and save a new folder:

**Files > Folder > Action (right-click image or document) > Create Folder > enter name of new folder** then click **submit** (paper plane symbol at the top, right of the screen) to save the revised name.

#### Delete Folder Content

You can keep a folder, but permanently delete all the content in it. As a safety feature, you will be asked **Permanently delete content?**

**Files > Folder > Action (right-click image or document) > Delete > Yes/No**

### 10.3 Action menu (for documents and images)

#### Move

Clicking Move leads to the **Create New Folder** option if you want to move saved images into a new folder. All other existing folders will appear on the list as well.

**Files > Folder > Action (right-click image or document) > Move > Create Folder > enter name of new folder > click Folder symbol located at the top, right of the screen**

#### Delete

Permanently deletes the saved document or image. As a safety feature, you will be asked **Permanently delete item?**

**Files > Action Menu (right-click image or document) > Delete > Yes/No**

#### Rename

Documents or images can be renamed by right-clicking them, then selecting **Rename** from the Action menu.

**Files > Folder > Action (right-click image or document) > Rename > enter the new name** and click **submit** (paper plane symbol at the top, right of the screen) to save the revised name.



#### Export

Documents or images can be exported elsewhere by right-clicking them, then selecting **Export** from the Action menu.

**Files > Folder > Action (right-click image or document) > Export > select export format (PDF, JPG or Text) > Export > select export destination**

When the export is complete, the “Exported to Downloads” message will appear.

#### Import

Documents or images can be imported into your Prodigy library from elsewhere (supported file types: PDF, TXT, JPG, and PNG).

**Files > Folder > select image or document > Settings > Import > select import destination > click submit (paper plane symbol at the top, right of the screen)**

When the import is completed, the “Carousel has been refreshed” message will briefly appear.



#### Properties

This section identifies and provides information on an image or document, such as name, type (example: JPEG), date created, date modified and size (example: 344 KB).

### **Files > Folder > Action (right-click image or document) > Properties**

Prodigi Windows allows you to paste external text files into the Files application and then open them using the Prodigi Windows interface. Copying can also be done outside Prodigi Windows in Windows applications that allow you to copy text (example: Internet browser, Dropbox, or your email).

## **11. Distance application**

---



The Distance application can be useful when you need a better view of something at a distance, such as a slide presentation during a lecture. Different camera options, such as a PC camera or a rear-facing tablet camera, are available in the Distance application. Just as with the Magnifier application, you must select a camera to use the Distance application.

The base of the page features a Button Banner that includes:

- a **back arrow** appears at the far left, click it to exit the Distance application and return to the Applications Carousel.
- you can also click the toggle symbols for quick access to magnifier app. They appear immediately to the right of the back button.

Four additional icons appear at the right side:

- the **Settings** symbol (gear)

- the **Image capture** symbol (camera)
- the **Plus and Minus magnification** symbols



## 11.1 DISTANCE SETTINGS

Once you are in the Distance application, click the **Settings** (gear) symbol that appears at the base of your screen. These settings allow you to select how images are captured (camera selection) as well as a variety of other image parameters (brightness, contrast, etc.)

### Camera

Note that one camera must be selected. Different cameras can be used for distance viewing.

**Distance > Settings > Camera >** select **Camera: Rear** or **Camera: Front**, a USB-connected camera such as the Hovercam SOLO8+ **document camera** or the **Kodak Wi-Fi distance camera** (refer to [Appendix 2](#) for complete instructions).

### Contrast

Live images can be viewed in a contrast that best suits your needs, there are 3 contrast types to choose from: color, positive or negative.

- **Color** (default) In live viewing mode, contrast is useful when viewing documents, objects, and photos in their original color.
- **Positive** contrast displays text and images in 2 colors according to the selected color combination (Black on White is the default combination).
- **Negative** contrast displays text and images in reversed contrast as compared to your selected color combination. This is useful if you wish to reverse the contrast of text that contains a variety of contrasts or highlights.

**Distance > Settings > Contrast > Color/Positive/Negative**

### Contrast Color

You can select from a variety of contrast color combinations to suit your needs and preferences. They include:

- Black on white (default), White on black, Black on gray, Gray on black, Black on yellow, Yellow on black, Black on orange, Orange on black, Black on cyan, Cyan on black, Black on purple, Purple on black, Black on green, Green on black, Blue on yellow, Yellow on blue, White on blue, Blue on white, Beige on black, Black on beige, Black on Red, Red on Black, White on Red and Red on White

**Distance > Settings > Contrast > select a Contrast Color from the list above**

### Brightness

Image brightness which can be incrementally adjusted from 0 to 100.

**Distance > Settings > Brightness > Click the Plus or Minus symbols** that appear at the bottom, right of the screen to increase or decrease screen brightness

### Autofocus (toggle)

Autofocus can be toggled from locked to unlocked (default) when you are in the Distance application. This is useful when an image is correctly focused and you need to lock its position. Alternately, you can double tap (tap twice quickly) anywhere on the screen to focus manually on a particular object when objects are positioned at different distances.

The following symbol will appear at the top, right side of your screen.




Double tap again anywhere on the screen to unlock autofocus. The Autofocus symbol will disappear.

**Distance > Settings > Autofocus (toggle) Locked/Unlocked** (default)

## 11.2 CAPTURING IMAGES

When using the rear-facing camera, point the Microsoft Surface tablet at an object that you wish to view.

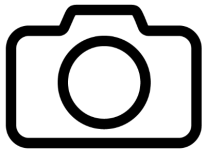


Click the **Capture symbol** to capture an image with your selected camera. You will hear a camera shutter sound, indicating that the document has been captured. Alternately, you can tap and hold your finger on the screen for 2 seconds. You will hear a camera shutter sound, indicating that the document has been captured, it takes a few moments to capture and process the image. Note: once a capture is initiated, it cannot be cancelled (this is a function of the Kodak software).

## 11.3 SAVING AN IMAGE OR DOCUMENT



Once you make a capture, the **Save symbol** will appear at the bottom, right of the screen. Click it to save your image or document in the Files application for future use. Clicking Save will immediately return you to the live camera mode.

## 11.4 ZOOMING IN AND OUT

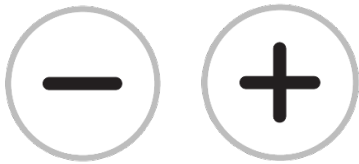


You can increase or reduce the size of a live image by clicking the **Plus or Minus symbols** at the bottom, right of the screen. (+) increases image/character size, and (-) decreases image/character size. You can also tap and hold the symbols to adjust the zoom levels progressively and incrementally. Release once you reach the desired zoom level.

Magnification range for a live image is from 1x to 28x.

Magnification/reduction range for a captured image or document is from 1x to 100x.

In addition to the increase/decrease magnification symbols, you can employ the **pinch and zoom** gesture to increase/decrease magnification. Decrease the distance between 2 fingers to zoom out, and increase the distance to zoom in.

### Pinch and Zoom gesture

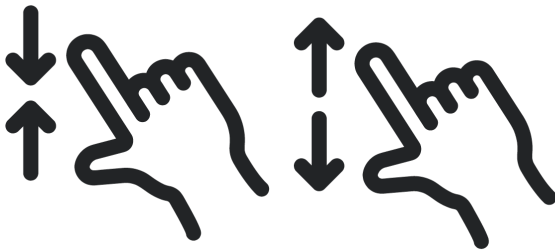

## 12. HELP APPLICATION

---



Note: internet access is required in order to use the following tools.

The rightmost item in the Carousel menu is the Help Application (question mark icon). This application is where you will find information on how to operate system software, how to connect cameras and troubleshooting tips. You will also find quick and easy methods to assist you in navigating and personalizing Prodigy Windows to suit your needs and preferences.

Clicking **Feedback** will redirect to our HumanWare web form. Use it to tell us what you think of the Prodigy Windows system, what you like, and how you think we can improve its features.

Clicking **Videos** to go to our HumanWare YouTube video channel, which contains a variety of informative and instructional videos on how to install and operate Prodigy Windows software.

Click **Documentation** to access support documentation, the HumanWare Buddy app and other resources.




## 13. GESTURE GUIDE

---

Note: the following gestures are for use with touchscreen-enabled devices.

Pinch and zoom gesture

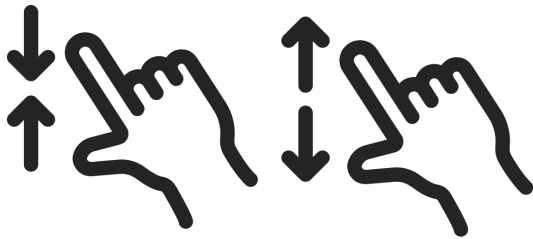

Tap gesture (for accessing applications, selecting preferences, etc.)



 

Double tap gesture (header bar, etc.)



Long press gesture (image capture, etc.)



Toggle from Live to Multi-Capture Mode or Contrasts

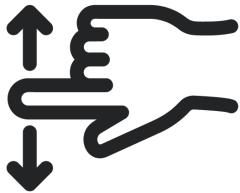

## 14. KEYBOARD SHORTCUTS

---

- Copy: **Ctrl + C**
- Cut: **Ctrl + X**
- Paste: **Ctrl + V**
- Maximize Window: **F11** or **Windows logo key + Up arrow**
- Minimize application: **Windows logo key + M**
- Open Task View: **Windows logo key + Tab**
- Display and hide the desktop: **Windows logo key + D**
- Switch between open apps: **Alt + Tab**
- Open the Quick Link menu: **Windows logo key + X**
- Lock your PC: **Windows logo key + L**
- Quit: **Ctrl + Q**

Click the following link to access the expanded list of [Keyboard shortcuts in Windows](#)

Prodigi for Windows has [keyboard commands that can be used only with HumanWare's wireless Bluetooth keyboard](#).

## 15. GLOSSARY

---

**Auto-focus:** a device or feature that focuses a camera or other piece of equipment automatically.

**Bluetooth:** a telecommunications industry specification that describes how mobile devices, computers and other devices can easily communicate with each other using a short-range wireless connection.

**Diamond Edge:** This screen feature allows you to magnify text to maximum levels without compromising text quality in the best color combination for your vision. It displays your selected color combination and images in their original color.

**High-Contrast Viewing:** The software makes text and images more readable for those with low vision. It enhances visual clarity and comfort, especially in documents or environments with poor lighting.

**HoverCam:** The HoverCam document camera is plug-and-play with Prodigy. While Pathway Innovations has developed their own software for the camera, it is NOT required for using the camera with Prodigy.

**OCR (optical character recognition):** OCR is a technology that recognizes text within a digital image. It is commonly used to recognize text in scanned documents and images. OCR software can be used to convert a physical paper document, or an image into an accessible electronic version with text.

**Reading Mode:** The software includes various reading modes such as full page, column, and line, which adapt to different reading preferences and tasks. Users can choose the mode that best suits their needs, enhancing their reading experience and productivity.

**Text-to-Speech (TTS):** Prodigy can convert printed text into spoken words, providing access to printed materials for individuals with visual impairments. Additionally, text-to-speech can be employed to read all elements of the software interface. This feature promotes literacy, independence, and accessibility.

**User Interface (UI):** The point of contact between humans and computers. Any technology you interact with as a user is part of the user interface. For example, screens, sounds, overall style, and responsiveness are all elements of UI.

**Windows-Based:** Written for Windows ensures a seamless integration with the user's preferred operating system, making it easy for users to incorporate Prodigy into their existing technology ecosystem. This compatibility provides a familiar and user-friendly experience.

## 16. TROUBLESHOOTING

---

Software will not install.

- Be sure that you have the administrator rights to install on your device

No audio when trying to read an OCR document

- Check **Settings > Audio** to see if **Documents Only** or **All** is selected.
- Ensure voices are downloaded and installed in **Settings > User Interface > System Language**
- Verify that tablet/headphone volume has been turned up sufficiently

No image appears in either the Magnifier or Distance applications.

- Check that a camera is selected by **clicking the gear wheel** and **select a camera**
- Check **camera connections** on both ends

Blank image in Magnifier or Distance application (white or black).

- Check that a camera is selected by **clicking the gear wheel** and **Camera**
- Close and open the application
- Exit and restart Prodigy
- Disconnect and reconnect your camera
- Reboot your system

## 17. PRODIGI SYSTEM RECOMMENDATIONS

---

What to look for in a PC:

<b>Description</b>	<b>Specification</b>
Operating System (64-bit)	Windows 11, Windows 10
Processor speed	Intel Core i3 (4 CPUs) or better CPU
Memory (RAM)	at least 6 GB
Required hard disk space	8 GB free disk space
Video	DirectX 11 or newer

Sound	Windows compatible sound card (for speech).
-------	---

What to look for in a document camera:

Description	Specification
Resolution	13MP
Color	24-bit color
FPS	60fps@10ADP
System	Windows 10+
Connectivity	USB connectivity

## 18. APPENDIX 1

---

### 18.1 BASIC PRODIGI WINDOWS BLUETOOTH KEYBOARD COMMANDS

Note: these keyboard commands are for the Bluetooth Keyboard by HumanWare. They do not apply to other keyboards.

Key	Action
ESC	Back
F1	Brightness down
F2	Brightness up
F3	Open Windows start menu
F4	Show active apps
F5	Open settings (specific to current view)
F6	Open magnifier
F7	Decrease reading speed
F8	Capture image <b>or</b> start/stop reading
F9	Increase reading speed

F10	Mute/unmute
F11	Decrease volume
F12	Increase volume
Power	Sleep/Wake (Not implemented on Windows)
Right CMD (HOME)	Return to Prodigy Home
Left CMD (BACK)	Back
Up Arrow	Move the locator
Down Arrow	Move the locator
Ctrl + Up Arrow	(Temporary until the Navigation mode is implemented)  Scroll up or page up
Ctrl + Down Arrow	(Temporary until the Navigation mode is implemented)  Scroll down or page down
Right Arrow	Move the locator
Left Arrow	Move the locator
Ctrl + Right Arrow	(Temporary until the Navigation mode is implemented) Scroll right or next page
Ctrl + Left Arrow	(Temporary until the Navigation mode is implemented) Scroll left or go back or previous page
Plus	Zoom in or increase text size
Minus	Zoom out or decrease text size
Right Alt	Prodigy Home
Left Alt	Back
Enter	Select item
Long Press Enter	Open action menu
Ctrl + Q	Exit to Android
Ctrl + B	Toggle button banner
Ctrl + C	Table of content
Ctrl + S	Download or Save
Ctrl + L	Toggle lights (Not implemented on Windows)
TAB	Move the focus
Ctrl + Mouse wheel	Zoom In/ Zoom out

## 18.2 GENERAL KEYBOARD SHORTCUTS

Key	Action
Up arrow	Move the locator scroll
Down arrow	Move the locator scroll
Left arrow	Move the locator scroll
Right arrow	Move the locator scroll
Ctrl + Up	Pan in an image or Scroll into the text (Column Mode)
Ctrl + Down	Pan in an image or Scroll into the text (Column Mode)
Ctrl + Left	Pan in an image or Scroll into the text (Line Mode) or Go to previous or next page in a document
Ctrl + Right	Pan in an image or Scroll into the text (Line Mode) or Go to previous or next page in a document
Plus +	Zoom in / Increase text size
Minus -	Zoom out / decrease text size
ESC	Back
Ctrl + Q	Exit current application
Alt + F4	Exit current application
Ctrl + B	Show/hide button banner
Ctrl + S	Save picture
TAB	Move the locator to next or previous area/item
Shift + TAB	Move the locator to next or previous area/item
Space	Trigger selected item
Enter	<ul style="list-style-type: none"><li>• Long press<ul style="list-style-type: none"><li>○ opens the contextual menu of selected item</li></ul></li></ul>
Shift + F10	Open contextual menu of the selected item
Mouse wheel	Zoom in/out or Scroll up/down



## 19. APPENDIX 2

---

### CONNECTING THE KODAK WI-FI DISTANCE CAMERA TO PRODIGI SOFTWARE

Using the Kodak camera for distance viewing with Prodigy software offers an enhanced visual experience, making it easier to see and magnify distant objects. To get the most from this setup, it's essential to use the included Wi-Fi Dual Band USB Adapter which creates a secondary network called Wi-Fi 2. This dedicated network allows a stable connection to the Kodak camera without interrupting your primary Wi-Fi, so you can enjoy seamless distance viewing and maintain access to the Internet on your device.

1. Ensure that your Prodigy software is installed and updated to version 1.1 or later.
  2. Fully charge the Kodak distance camera (SL-10 or SL-25) using the charger.
  3. Attach the Kodak camera to the flexible gooseneck.
  4. Slide the mounting adapter onto the HoverCam SOLO 8+ vertical arm.
  5. Insert the gooseneck with the camera into the adapter.
  6. Plug the Wi-Fi Dual Band USB Adapter into a USB port on your Windows device and follow the setup prompts.
  7. Launch the Prodigy software and open the Distance application.
  8. Click the Settings (gear) icon.
  9. Press the power button on the Kodak camera.
  10. Select "Camera," then choose "Wi-Fi 2" from the list.
- Note: Choosing "Wi-Fi" as your network will disable Internet access, as this is your primary network.
11. Click "Find a camera" and select PIXPRO-SL10\_XXXX or PIXPRO-SL25\_XXXX.
  12. Enter the Kodak camera password: 12345678.
  13. Exit the Settings menu to return to the Distance application and begin using the Kodak camera for distance viewing and magnification.

If you exit Prodigy, or lose your connection, a message will appear onscreen in addition to a Reconnect button in the lower left corner of the Distance application interface to the right of the Magnifier-Distance toggle button. Click the Reconnect button to re-establish your camera.

You can disconnect from the selected Wi-Fi camera by selecting another Wi-Fi, USB, or integrated camera from the Distance application.

To completely remove a Wi-Fi camera, open the Distance application, navigate to the Wi-Fi to which it is connected, click on settings (gear wheel) to manage the Wi-Fi camera, click on the camera to be removed, select “Forget,” and confirm your choice. Use the back arrow in the upper left corner to return to the Carousel.

**Distance > Settings > Camera > Wi-Fi 2 > Settings > PIXPRO-SL 10 or SL-25 > Forget > Yes/No**

## 20. TECHNICAL SPECIFICATIONS

---

### PRODIGI LOW VISION SOFTWARE FOR WINDOWS

*Note: Prodigy for Windows is optimized for use with the from HoverCam; results with other document cameras may vary.*

Software System Requirements:

- Operating System
  - Windows 10 or greater
  - 64-bit
- Processor: 2.0 GHz i5 dual core or higher processor recommended
- Memory (RAM): 8 GB or more recommended
- Required hard disk space:
  - 2 GB with more space required for additional voices
  - SSD drive recommended
- Video:
  - Video/Graphics card with support for DirectX 9 or later with WDDM 1.0 driver
  - 1024x768 display resolution recommended
- Sound: Windows-compatible sound card (for speech)

Recommended Minimum Document Camera Specifications

- Windows 10 or greater compatibility
- 13MP 1280 x 720, or greater
- 60 frames per second
- USB connectivity

## **PRODIGI LOW VISION SOFTWARE: STARTER KIT**

Prodigi Low Vision Software for Windows (above)

SOLO 8+ Document Camera — HoverCam

- 13MP
- 4224x3156 (4K HD)
- 24-bit color
- Image capture 13"x21", A3, A4, 11"x17", US Letter & US Legal
- Focus, Auto-focus, Auto-focus Lock, Selective Focus, 5 cm Minimum Focal Distance
- Video resolution 4K @30fps, 1080p @60fps, 720p @120fps
- 2.2lbs
- [Full specifications from HoverCam](#)

## **PRODIGI LOW VISION SOFTWARE: COMPLETE KIT**

Prodigi Low Vision Software for Windows (above)

SOLO 8+ Document Camera — HoverCam (above)

Microsoft Surface Pro 9

- Operating System: Windows Pro 11
- CPU: Intel Core i5 (12th Gen) 1245U / 1.6 GHz
- Memory (RAM): 8GB; LPDDR5 SDRAM
- Storage: 128GB SSD
- Display: 13" touchscreen (10-point multi-touch); 2880 x 1920
- Audio/Video: Intel Iris Xe Graphics, Cameras: 4K (rear); 1080p (front), Resolution: 10 Megapixel (rear), Stereo speakers, dual far-field studio microphones, Dolby Atmos compliant
- Wireless: Bluetooth 5.1, 802.11a/b/g/n/ac/ax (Wi-Fi 6E)
- Battery: Up to 15.5 hours
- Connections: 2 x USB4 (supports Thunderbolt 4) (Type C)
- Dimensions: 11.3 in x 8.2 in x 0.4 in
- Weight : 31 oz

## **PRODIGI LOW VISION SOFTWARE: ALL-IN-ONE PC**

Prodigi Low Vision Software for Windows (above)

SOLO 8+ Document Camera — HoverCam (above)

### **AOC UPS All-in-One PC**

- Operating System: Windows Pro 11
- Processor: Intel® Core™ i3-12100
- Memory: DDR 16GB
- Storage: 512GB SSD
- UPS Battery: 60 minutes
- LED Monitor: 23.8", IPS Full HD, 1920x1080, matte
- LAN: Realtek 8111EL&F 100/1000M
- Ethernet: RJ45 port
- Audio: Realtek ALC662, Azalia Code support
- 5.1 channel output, 2 Jacks, MIC in/line out
- Wi-Fi: 802.11b/g/n/ac 2.4GHz & 5GHz
- Dual-band WI-FI 5 and Bluetooth 4.0
- Speakers: Two 3W
- Height adjustable stand with quick-release function
- Color: Black
- Camera: 3MP
- Keyboard: AOC USB
- Mouse: AOC USB
- Power Adapter: 13.5/19V
- I/O: 1 line out and 1 Mic in, COM Port, 2 - USB 2.0 Ports, 4 USB 3.0 Ports, LAN RJ45, HDMI, DC-In port
- Display dimensions 21.25" x 14.9-19.8" x 8.15" (W x H x D)
- Weight: Display only 11lbs; with keyboard and mouse 18.1lbs

## **21. SOFTWARE MAINTENANCE AGREEMENT AND WARRANTIES**

---

### **21.1 SOFTWARE MAINTENANCE AGREEMENT**

- 1<sup>st</sup> year of ownership all upgrades\* and updates\*\* at no cost
- Starts at software activation
- Available options after 1<sup>st</sup> year

- 1-year Software Maintenance Agreement (SMA)
  - 2-year Software Maintenance Agreement (SMA)
- Without SMA, users receive updates only.
- If coverage lapses, a portion (or even all) of any SMA purchase will be applied to bring coverage current

\*Upgrades include new features, compatibility, and bug-related fixes

\*\*Updates include compatibility and bug-related fixes only

## **21.2 WARRANTIES**

Microsoft Surface Pro 9: 1-year limited manufacturer's warranty

AOC All-in-One PC: 1-year limited manufacturer's warranty

Bluetooth Keyboard and Mouse: 1-year limited manufacturer's warranty

6-in-2 Microsoft Surface Docking Station: 1-year limited manufacturer's warranty

Hovercam SOLO 8+ document camera, 2-year limited manufacturer's warranty